


GB AWT 8128

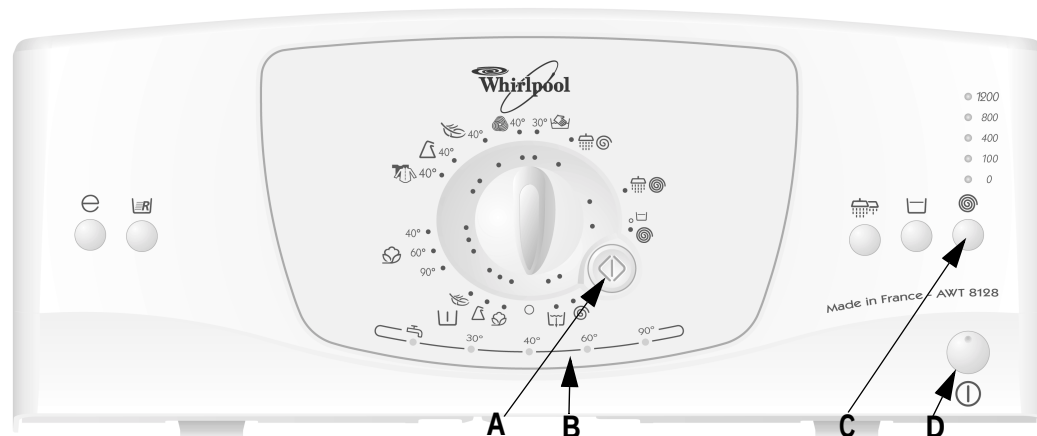

- A. "Start" Button
- B. "Temperature" Indication lamps
- C. "Spin Speed Selection" Button
- D. "On/Off" button

"Cold"

- 1) Do not use liquid detergents.
- 2) For improved garment care, spin speed is restricted to 800 rpm in this programme.
- 3) For improved garment care, spin speed is zero in this programme.

Programme	Care Labels	Type of wash / Notes	Max. load kg	Detergents and additives				Special Options				Max. Spin Speed rpm
				Prewash 	Main Wash 	Softener 	Bleach 	Eco 	Rapid 	Intensive Rinse 	Rinse Hold 	
Cotton 90° with prewash		Heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	Yes ¹⁾	Yes	*	*	*	*	*	*	1200
Synthetic 60° with prewash		Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	Yes ¹⁾	Yes	*	—	*	*	*	*	800 ²⁾
Delicate 40° with prewash		Heavily soiled curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	Yes ¹⁾	Yes	*	—	—	—	—	*	800 ²⁾
Cotton 40°-60°-90°		Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	—	Yes	*	*	*	*	*	*	1200
Daily Mixed 40°		Slightly to normally soiled textiles made of cotton and/or synthetics.	3.0	—	Yes	*	—	—	—	*	*	1200
Synthetic 40°		Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon).	2.0	—	Yes	*	—	*	*	*	*	800 ²⁾
Delicate 40°		Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	—	Yes	*	—	—	—	—	*	800 ²⁾
Wool 40°		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	Yes	*	—	—	—	—	*	800 ²⁾
Handwash 30°		Textiles made of silk, linen, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. No spinning.</i>	1.0	—	Yes	*	—	—	—	—	*	— ³⁾
Rinse + Gentle Spin		— <i>Programme for treating delicate laundry with starch or softener.</i>	2.0	—	—	*	—	—	—	—	*	800 ²⁾
Rinse + Spin		— <i>Programme for treating cotton or linen laundry with starch or softener.</i>	5.0	—	—	*	—	—	—	—	*	1200
Spin		— <i>Programme to spin cotton or linen laundry intensively with maximum spin speed.</i>	5.0	—	—	—	—	—	—	—	—	1200
Gentle spin		— <i>Programme to spin delicate laundry gently with a restricted spin speed.</i>	2.0	—	—	—	—	—	—	—	—	800 ²⁾
Drain		— <i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>	—	—	—	—	—	—	—	—	—	—

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

Whirlpool is a registered trademark of Whirlpool USA.

5019 312 00144

CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)
Cotton	90	5.0	*63	1.80	2:05
Cotton	60	5.0	55	0.95	2:05
Cotton	40	5.0	55	0.55	2:05
Daily Mixed	40	3.0	49	0.48	1:00
Synthetic	40	2.0	50	0.40	1:30
Delicate	40	1.5	60	0.55	0:50
Wool	40	1.0	60	0.50	0:50
Handwash	30	1.0	60	0.30	0:40

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

The data on the "Energy Label" refer to the programme "Cotton 60°C".

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

PREPARATION OF WASH CYCLE

- Load the machine, close the drum doors and check that they are properly locked.
- Add detergents and additives into the dispenser to no more than the **"MAX"** level mark, as follows:
 - Programme with pre and main wash | II
 - Main wash programme without prewash II
 - Fabric softeners and conditioners ☼
 - Chlorine bleach ▲
 - Stain remover agents II
 - Anti-scale agents (if necessary) II
- Press the **"On/Off"** button ①. The pilot lamp of the **"On/Off"** button ①, a spin speed indicator lamp and, in case of availability, a temperature indicator lamp light up.
- Turn the programme selector knob to the desired programme and temperature. **The knob will move half a step for correct positioning. The temperature indication (if available) switches to the selected temperature.**

SELECT THE DESIRED OPTION

Selecting or deselecting an option can be done at any time during the programme. The option will be applied as long as the corresponding programme phase has not been executed yet.

"Eco" button ☺

- The duration of the wash is extended and the max temperature reduced to save up to 40% of energy compared to a normal wash but maintaining good washing results.

"Rapid" button ⚡

- For fast, energy saving wash cycles.
- Ideally suited for small loads consisting of lightly soiled laundry.

"Intensive Rinse" button 🚿

- One rinse cycle is added to ensure a more intensive rinse.
- This option is particularly suitable for areas with very soft water, washing baby linen and people with detergents allergies.

"Rinse Hold" button ⏸

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from fading.
- This option is particularly recommended for the "Synthetic" ▲, "Delicate" 🌸 and "Daily Mixed 🧻" programmes.
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Note: the programme selector knob stops on ⏸.

Appliance in "Rinse Hold":

- Press the "Rinse Hold" button ⏸ again: the programme will terminate automatically with the selected spin cycle.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" 🚰 programme and press the **"Start"** button ⏻ again.

PROGRAMME START

Turn on the tap and press the **"Start"** button ⏻. The indicator lamp of the **"Start"** button ⏻ lights up.

Note: If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

END OF WASH CYCLE

- The programme selector knob is in the Stop position "○".
- Press the **"On/Off"** button ① to switch off the machine.
 - Turn the tap off.
 - Wait for the lid to unlock (about 1 minute).
 - Open the lid and the drum doors and unload the machine.

CHANGE THE PROGRAMME DURING THE WASH CYCLE

- Turn the programme selector knob to the new programme. **The programme selector knob moves half a step and the pilot lamp of the "Start" button flashes.** If necessary, select the additional options and the spin speed.
- Start programme by pressing the **"Start"** button ⏻.

PAUSE/INTERRUPT A PROGRAMME

If, for any reason, you wish to interrupt the programme for a certain time and continue it later:

- Press the **"On/Off"** button ①.
- After the desired pause, press again on the **"On/Off"** button ①.

CANCEL PROGRAMME

- Set the programme selector to "Drain" 🚰.
- Press the **"Start"** button ⏻ to start the "Drain" 🚰 programme.